




# COOKTOP PARTS

For Models: RF110AXSQ2, RF110AXST2  
(Designer White) (Designer Biscuit)

30" ELECTRIC FREESTANDING  
STANDARD CLEAN RANGE

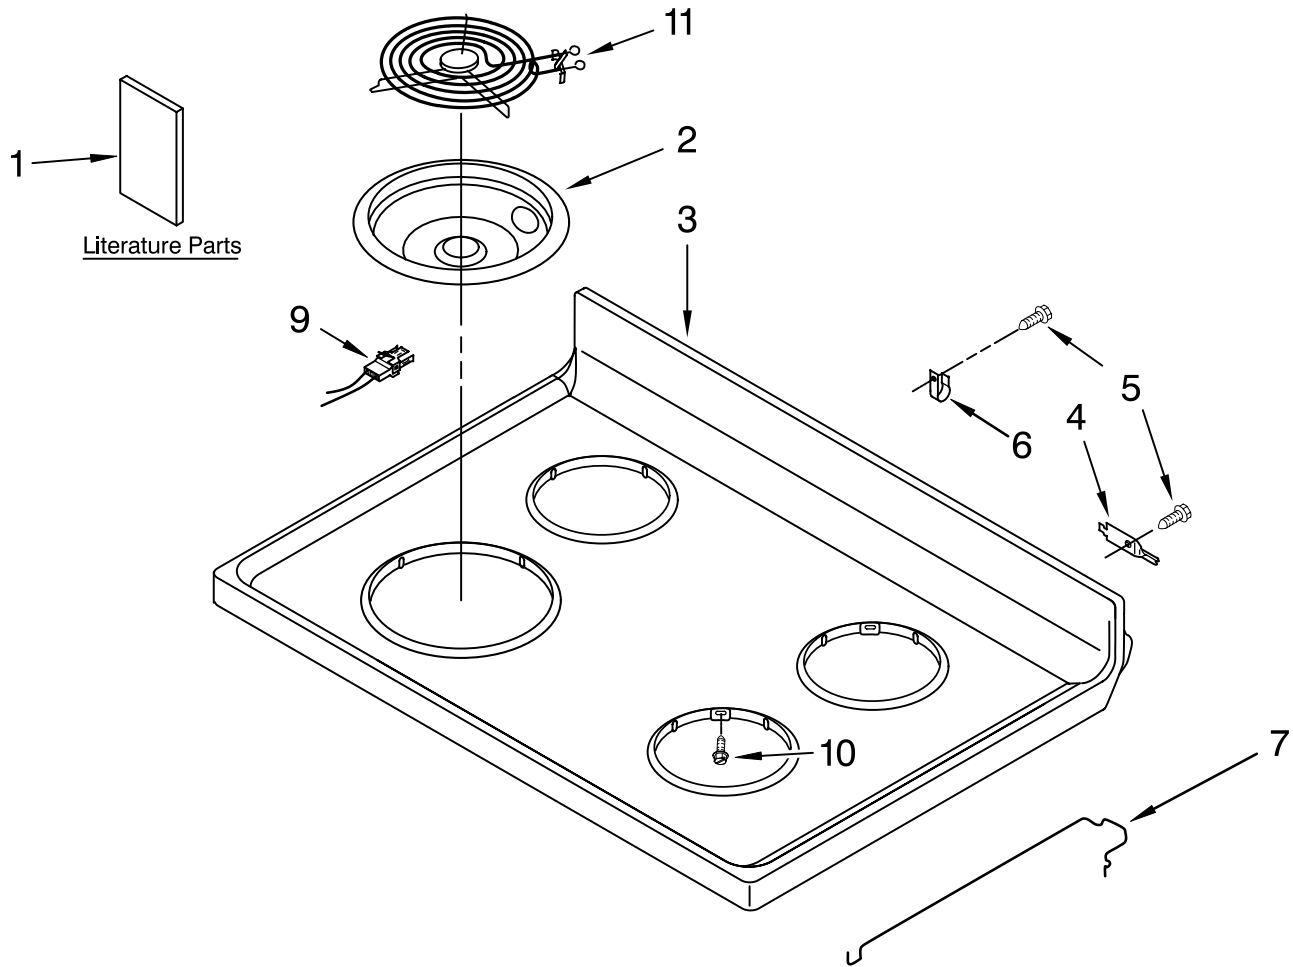

Illus. No.	Part No.	DESCRIPTION
1	W10141166	Literature Parts Instructions, Installation
	W10162203	Owners Manual
	W10114281	Sheet, Tech
	9762761	Safer Cooking Tips Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French


Illus. No.	Part No.	DESCRIPTION
2	3195208	Bowl, Drip
	3195209	6" Chrome (3)
	3195209	8" Chrome (1)
3	3186235	Cooktop White
4	3195060	Hinge, Cooktop (2)
5	3196178	Screw

Illus. No.	Part No.	DESCRIPTION
6	308605	Strain Relief
7	3195812	Rod, Support (2)
9	814399	Receptacle, Elmnt
10	3196154	Screw
11	9761348	Element, Surface
	9761348	6" (3)
	9761346	8" (1)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: RF110AXSQ2, RF110AXST2  
(Designer White) (Designer Biscuit)

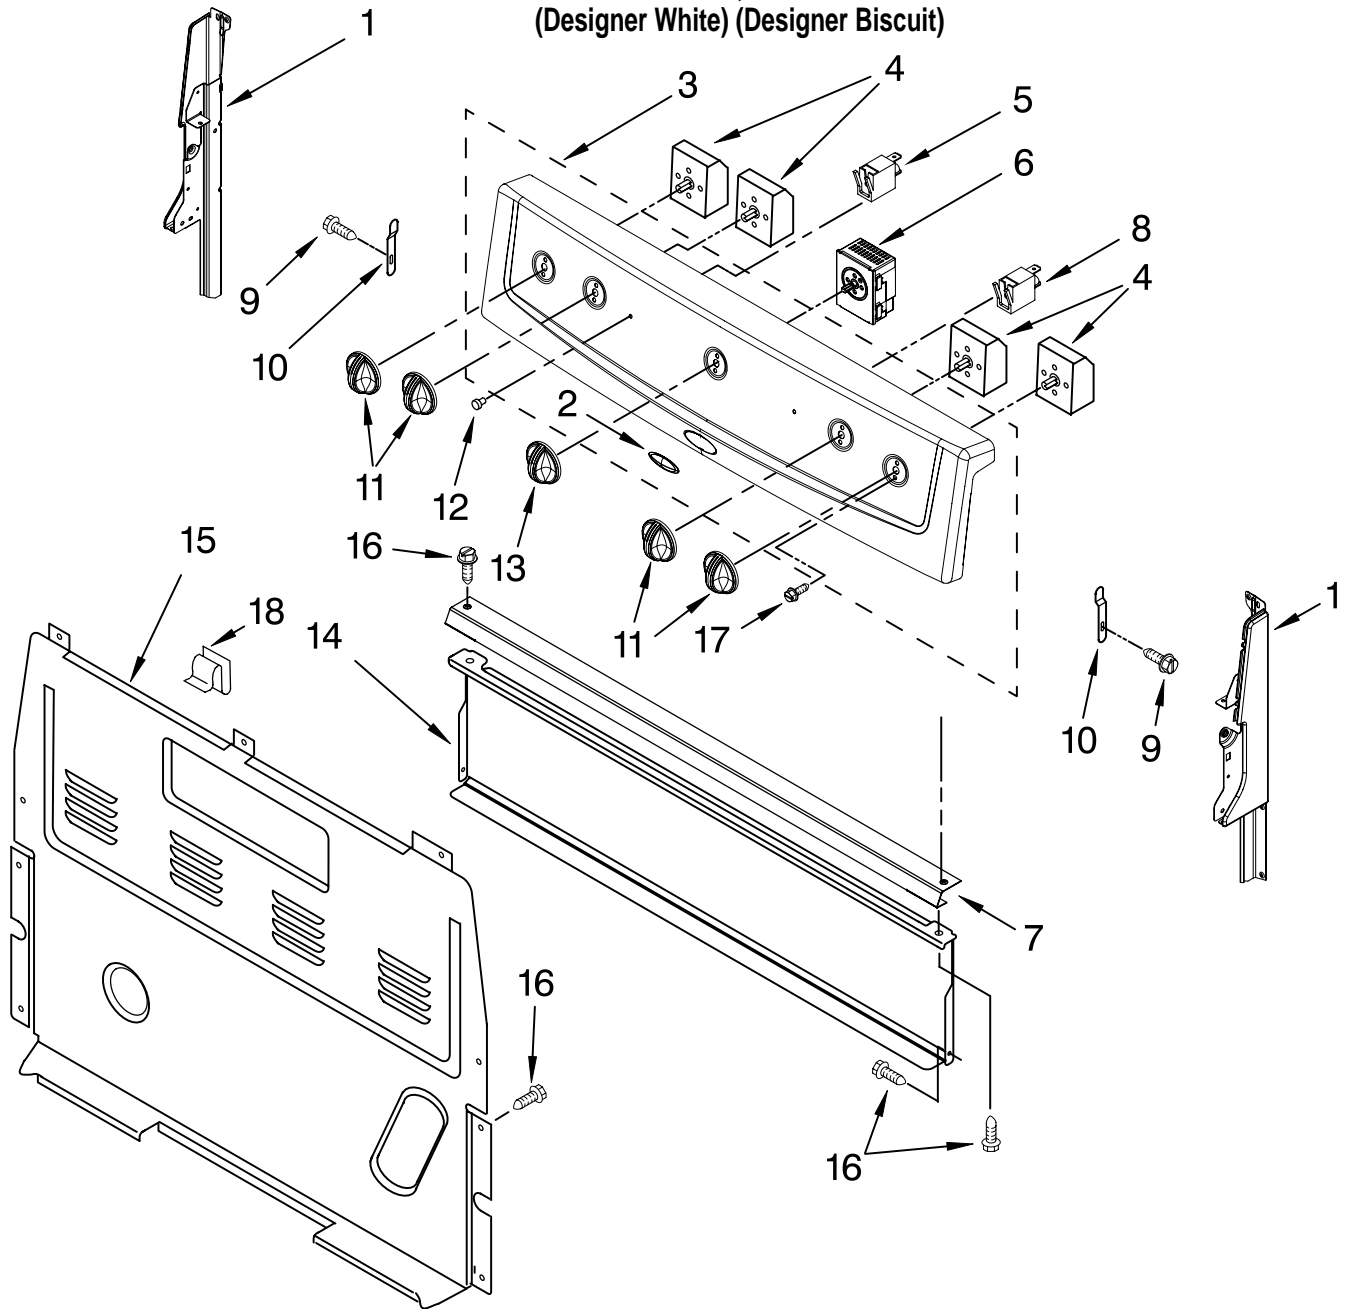


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10009040	Endcap Left Hand White	5	8523265	Indicator, 125V	12	3196068	Lens, Ind. (2)
	W10009050	Right Hand White	6	9762215	Cntrl-Elec ROC60	13	9762526	Knob, Thermostat White
2	9757609	Nameplate	7	9762095	Brkt-Mntg, Console	14	8053912	Shield, Heat
3		Panel, Backguard	8	8523266	Indicator, 250V	15	8272473	Cover, Upper Rear
	9762010	White	9	3196166	Screw	16	3196178	Screw
4		Switch, Infinite	10	3196200	Clip, Spring (2)	17	3400882	Screw
	3148953	Use W/ 8" Element	11		Knob (4)	18	8273564	Clip
	3148951	Use W/ 6" Element		9761962	White			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF110AXSQ2, RF110AXST2  
(Designer White) (Designer Biscuit)

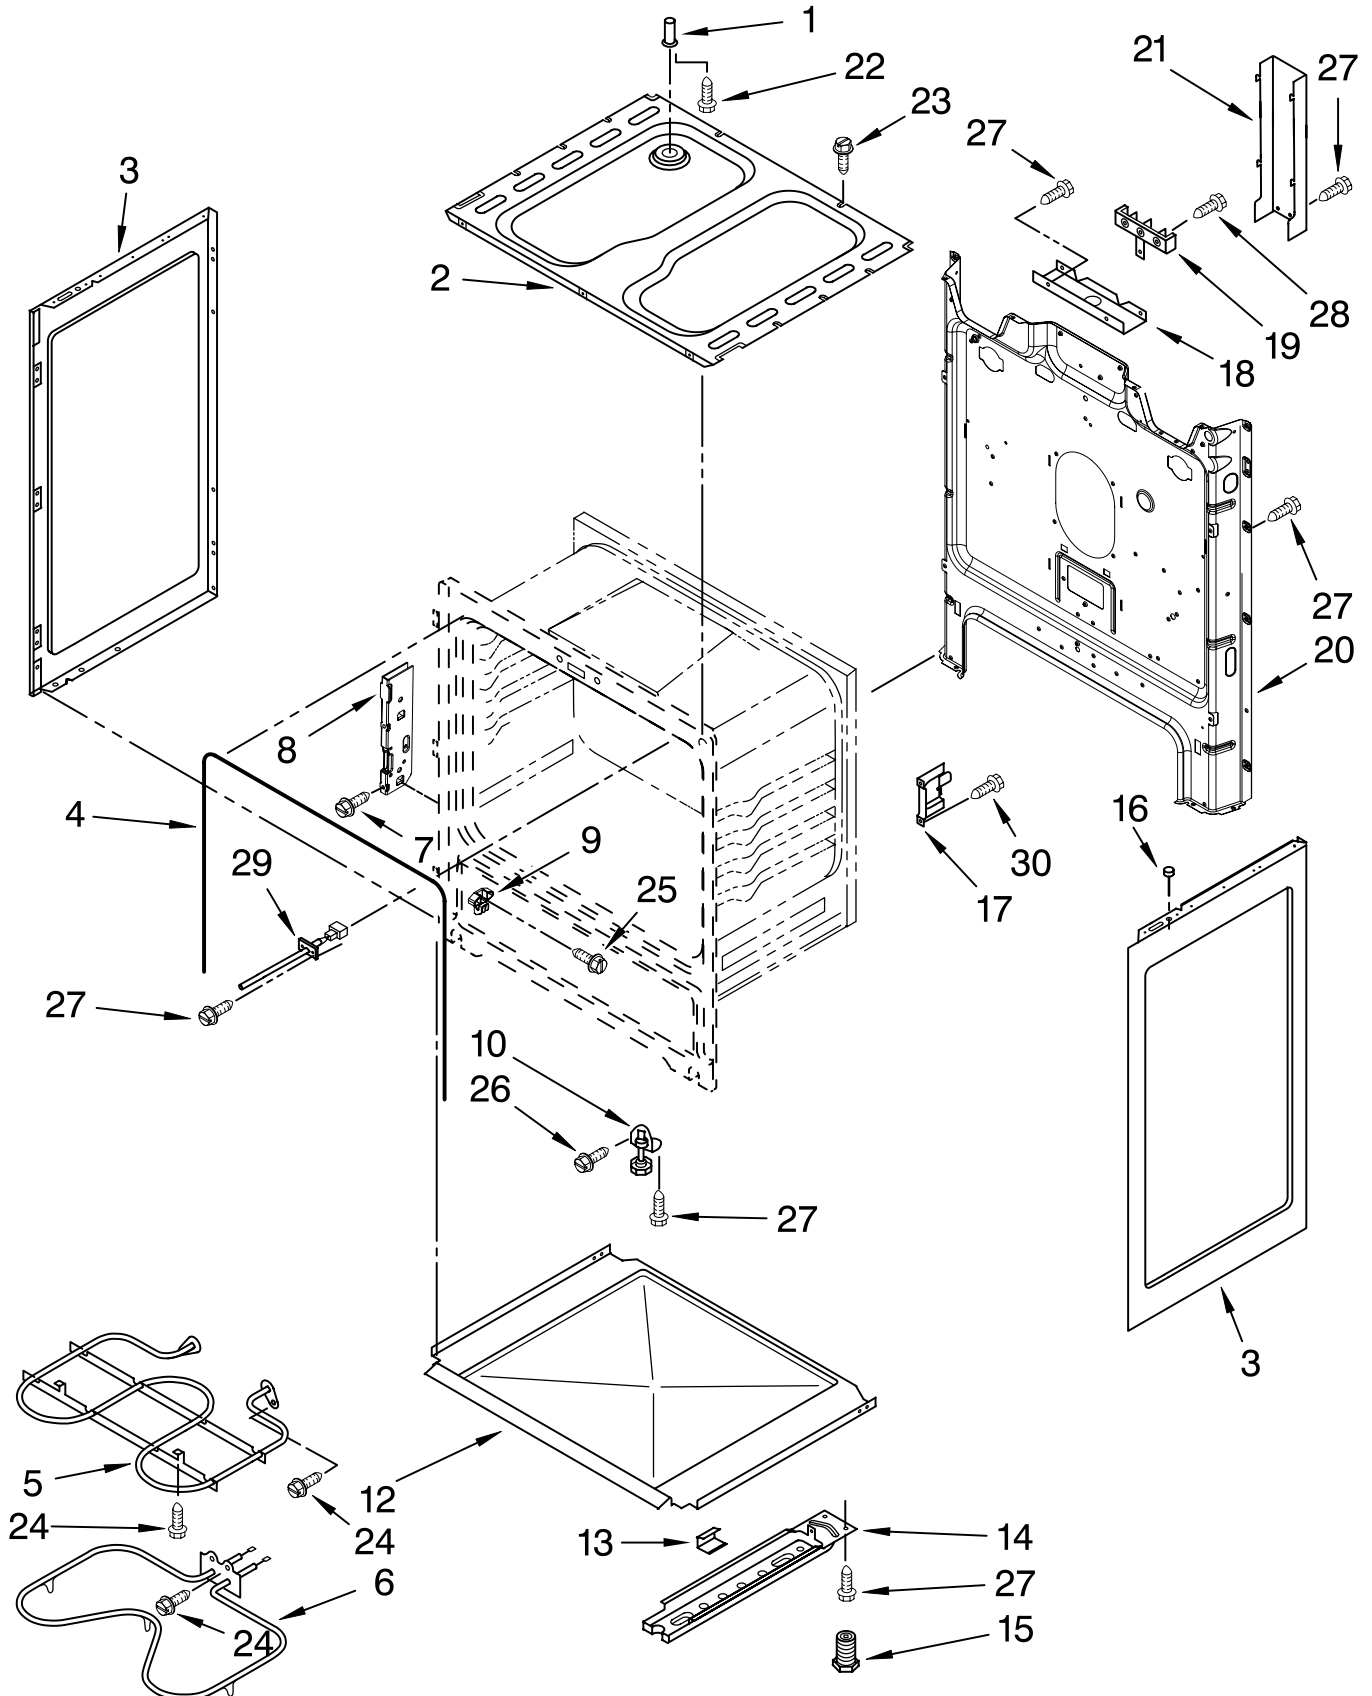

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF110AXSQ2, RF110AXST2  
(Designer White) (Designer Biscuit)


<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
1	3169143	Vent Tube
2	3186144	Box, Burner
3		Panel, Side (2)
	8053830	White-Textured
4	W10129032	Seal, Oven Door
5	9757340	Element, Broil
6	9758541	Element, Bake
7	W10031780	Screw
8	9760407	Brkt, Mounting
9	W10114344	Glide, Drawer Frnt
10	3196037	Foot, Front (2)
12	8054068	Tray, Insulation
13	3196576	Clip, Panel (6)
14	9760314	Rail, Base (2)
15	W10058460	Foot, Rear (2)
16	3195809	Bumper, Side (2)
17	3186116	Support, Oven (2)
18	3186034	Bracket, Service
19	9761958	Block, Terminal
	112432	Nut (3)
20	8274034	Back, Main
21	9758283	Cover, Box
22	3196567	Screw
23	3196168	Screw
24	3196174	Screw
25	3196165	Screw
26	3196179	Screw
27	3196178	Screw
28	3400016	Screw
29	W10131826	Sensor
30	3196169	Screw

## **INSULATION**

8273263 Insulation, Wrap  
8272611 Insulation, Back

# DRAWER & BROILER PARTS


For Models: RF110AXSQ2, RF110AXST2  
(Designer White) (Designer Biscuit)

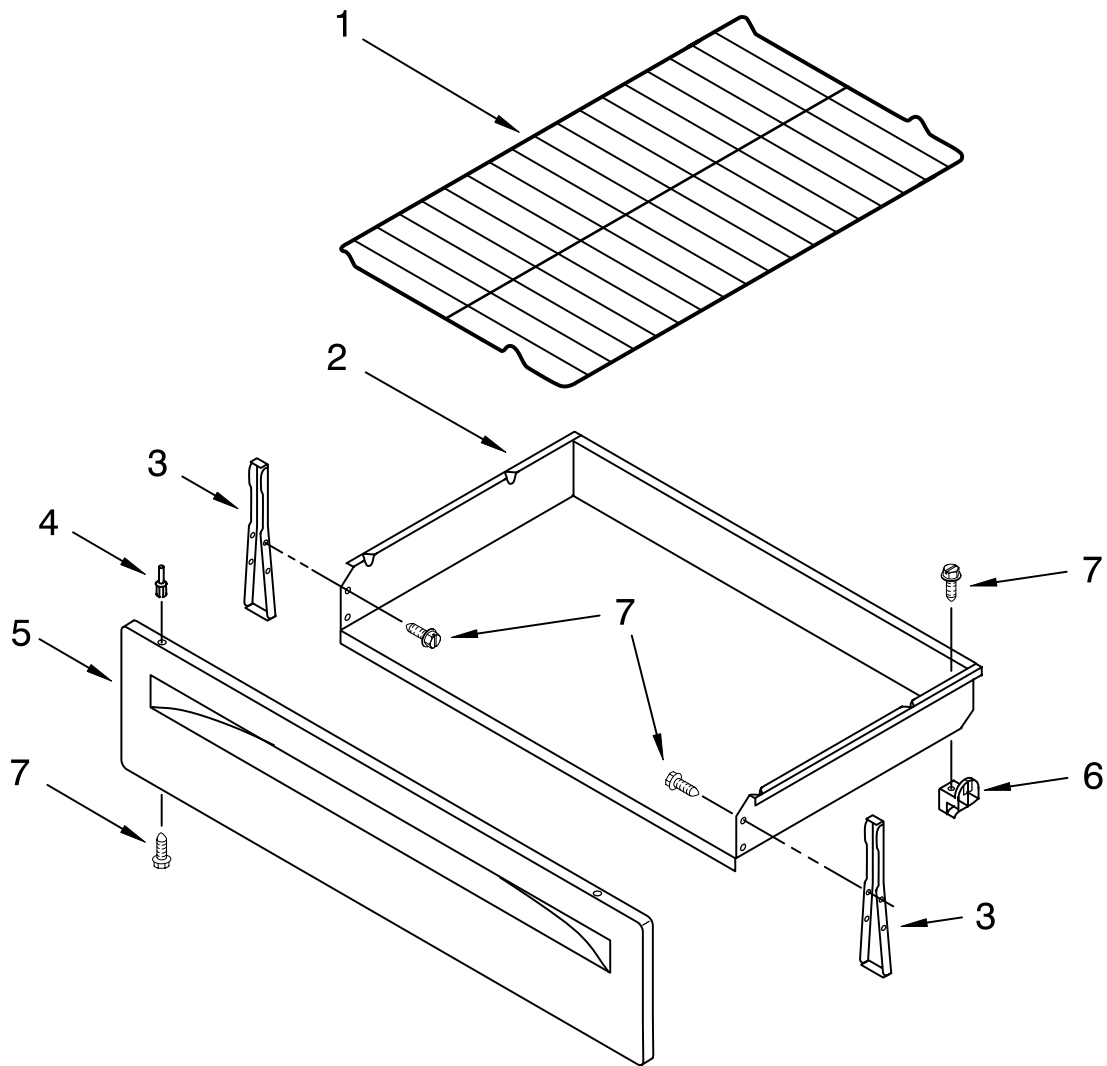

Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761031	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196814	White
5		Panel, Drawer Frnt
	8053339	White
6	8053334	Glide, Drawer (2)
7	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

**For Models: RF110AXSQ2, RF110AXST2  
(Designer White) (Designer Biscuit)**

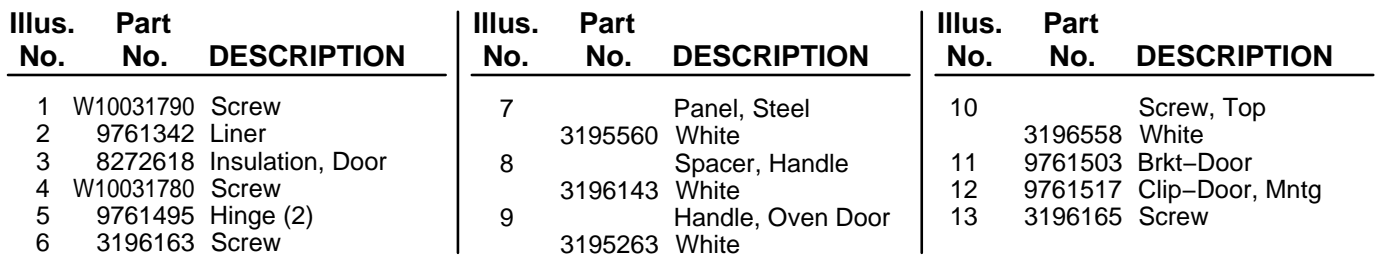

W10185580

# OPTIONAL PARTS

For Models: RF110AXSQ2, RF110AXST2  
(Designer White) (Designer Biscuit)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

## SPLICING WIRES--25FT.

### LENGTH

242828	Wire, Black	12 Ga. 150° c
8316781	Wire, Black	14 Ga. 150°c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

## INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

## PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

## PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Almond (Uncut)

## ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass
4396923	Pan-Broiler

## ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

## WIRING HARNESS PARTS

W10113076	Harness, Main
9761476	Harness, Cooktop
3196154	Screw, Grnd-Cktop
3196174	Screw, Grnd-Back
311227	Wire, Ground
313660	Clip, Ground Wire
3196173	Screw, Ground

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST